

Replacing the handle set

Product code 51167 contains:	A complete handle set
The following tools are needed:	Flat nose pliers or similar tool
	An allen key
	Tool to mount the bauart spring, buy here .

How to replace the handle set step by step:

- Open the door.
- Dismount the [bauart](#) spring with a pair of pliers or the special tool.
- Remove the two pins which hold the door and dismount the door. If the pins are secured, remove the safety rings by using the pliers.
- Place the door face down on a soft material to protect the paint.
- Dismount the safety pin in the base of the handle set.
- Loosen the quill screw at the top of the handle set and dismount the claw.
- Remove the handlebar.
- Mount the new handle set in opposite order as described above.

Hereafter you can use your stove again.